

LIGHT (A Key)

MODE (B Key)




(D Key) START

(C Key) RESET

A . Features

- 12 Digits LCD Display, Display Hour ,Minute ,Second ,Month ,Day and Week
- Daily Alarm and Chime hourly
- Snooze
- 12 / 24H format selectable
- 1/100 second Chronograph with split functions
- EL backlight

B . Operational Manual

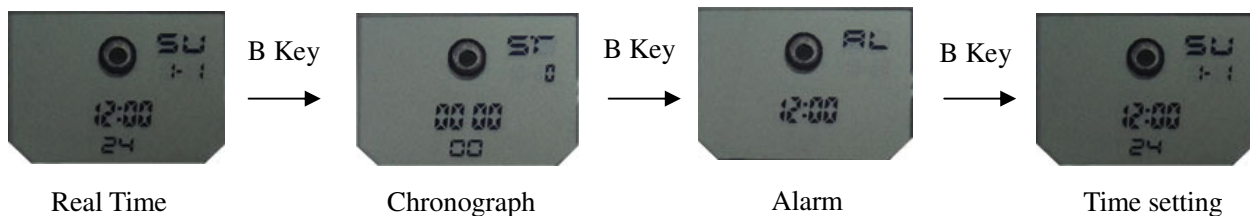

1. At any state ,press A key EL backlight for 3s .

2. Chronograph

- Press D key to Start/Stop running ;
- When stop ,press C key to zero .
- When running ,press C key to split count. indicator "SP" showing
- Then press D key to exit split count ,and stop counting ; press C key again to zero ;
- When running ,press B key to return to Real Time Mode ,and it running at back .

3. Daily Alarm

- Turn On / Off Alarm and Chime
Press D key to turn on/off Alarm (AL) or Chime (CH)
- Alarm setting : Press C key to select "Hour " or "Minute "setting, Press D key to adjust the flashing item, Press C key to confirm, Press B key to return to Real Time mode.
- Alarm Snooze ON/OFF

At Alarm sounding state ,press C key or D key to stop sounding ,and press B key to ON/OFF snooze function .When Snooze function be ON ,it will sound five minutes later ,and auto stop after sounding for 20 Second.

4. Time Setting

- "Second " flashing when loading ,press D key to zero ; Press C key to select item as following sequence :
Hour → Minute → Month → Day → Day of Week → Second
- When setting "Hour " ,"H" display for 2 4 H format ;"A" or "P" for 1 2 H format .
- Press D key while the seconds are in the range of 30 to 59 resets them to 00 and adds 1 to the minutes . In the range of 00 to 29,the minutes are unchanged.